

- Do not install your refrigerator in any location not properly insulated or heated e.g. garage etc. Your refrigerator was not designed to operate in temperature settings below 55° Fahrenheit.

Install Limitations

- Select a suitable location for the refrigerator on a hard even surface away from direct sunlight or heat source e.g. radiators, baseboard heaters, cooking appliances etc.

INSTALLING YOUR REFRIGERATOR (cont'd)

You will need it to obtain warranty service.

Staple your receipt to your manual.

children may not easily climb inside.

take off the doors. Leave the shelves in place so that

- After your refrigerator is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
- Remember to record the model and serial number. They are on a label in back of the refrigerator.
- If your old refrigerator is not being used, we recommend that you remove the doors and leave the shelves in place. This will reduce the possibility of danger to children.
- Do not use any electrical device or any sharp instrument in defrosting your refrigerator.

Thank you for using our Haier product. This easy-to-use manual will guide you in getting the best use of your refrigerator.

Before you throw away your old refrigerator or freezer,

Risk of child entrapment.

- Unplug your refrigerator before cleaning or before making any repairs.
- If for any reason this product requires service, we strongly recommend that a certified technician performs the service.

Repair or replace immediately, all electric service cords that cord that shows cracks or abrasion damage along its length, the plug or the connector end.

- Never unplug your refrigerator by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.

2) This refrigerator must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.

- Use this appliance only for its intended purpose as described in this use and care guide.

Read all of the instructions before using this appliance. When using this appliance, always exercise basic safety precautions, including the following:

SAFETY PRECAUTIONS

- Do not operate your refrigerator in the presence of explosive fumes.
- This refrigerator should not be recessed or built-in in enclosed cabinet. It is designed for freestanding installation only.

SAVE THESE INSTRUCTIONS

For Future Reference

GENERAL FEATURES

Before you throw away your old refrigerator or freezer,

Risk of child entrapment.

- Unplug your refrigerator before cleaning or before making any repairs.
- If for any reason this product requires service, we strongly recommend that a certified technician performs the service.

Repair or replace immediately, all electric service cords that cord that shows cracks or abrasion damage along its length, the plug or the connector end.

- Never unplug your refrigerator by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.

2) This refrigerator must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.


- Use this appliance only for its intended purpose as described in this use and care guide.

Read all of the instructions before using this appliance. When using this appliance, always exercise basic safety precautions, including the following:


- Do not operate your refrigerator in the presence of explosive fumes.
- This refrigerator should not be recessed or built-in in enclosed cabinet. It is designed for freestanding installation only.

Compact Refrigerator

Refrigerador Compacto

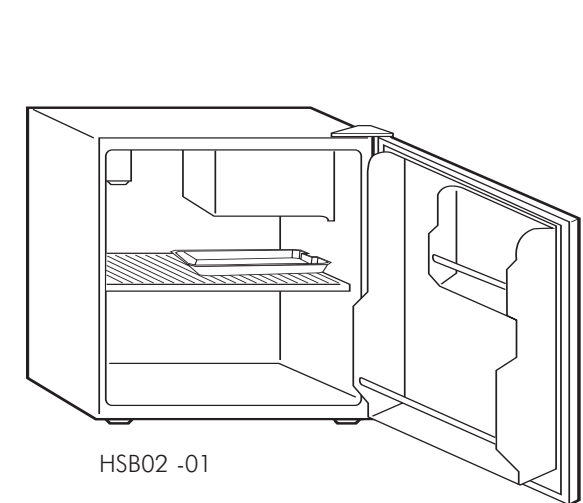

HSB02-01

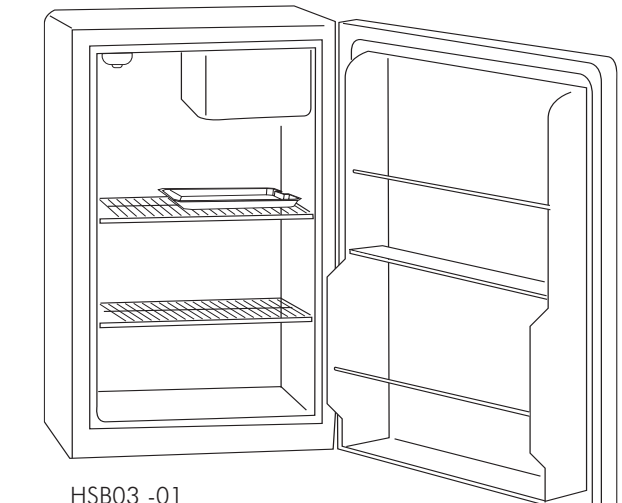

HSB03-01

User Manual Model # HSB02 -01 & HSB03 -01

Manual del Usuario Para Modelo de # HSB02 -01 & HSB03 -01



Quality n Innovation n Style

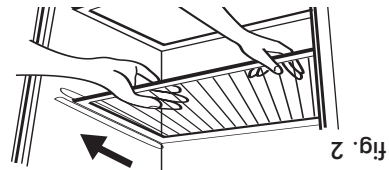


fig. 2

2. To replace the shelf, gently slide the shelf back.

1. Gently tilt the shelf up and slide forward until the shelf has been completely removed.

To remove or replace a full-width slide-out shelf: (see fig. # 2)

Refrigerator Interior Shelves

(Note: If the refrigerator has been placed in a horizontal or tilted position for any period of time wait 24 hours before plugging the unit in.)

Adjustable temperature dial:

Your refrigerator will automatically maintain the temperature level you select. The temperature control dial has 7 settings plus off. 1 is the warmest, 7 is the coldest. Turning the dial to OFF stops cooling in both the refrigeration and freezer sections. At first, set the dial to 4 and allow 24 hours to pass before adjusting the temperature to your needs.

To defrost freezer, remove food and ice cube tray from the freezer section. Your model requires you to place the drip tray under the freezer section (see Fig. 3). To defrost turn the temperature control dial to the OFF position. Defrosting may take a few hours. To speed up defrost time, keep the door open and place a bowl of warm water in the refrigerator.

During the defrost cycle, water will accumulate in the drip tray. The drip tray may also need to be emptied during the defrost process. Do not leave unattended.

After defrosting, empty and wipe down the drip tray, as well as the interior of the refrigerator. You may now reset your refrigerator to the desired temperature and return food.

For maximum energy efficiency, defrost freezer section whenever frost accumulates to a thickness of 1/4" or more on freezer walls. Note that frost tends to accumulate more during the summer months.

To defrost freezer, remove food and ice cube tray from the freezer section. Your model requires you to place the drip tray under the freezer section (see Fig. 3). To defrost turn the temperature control dial to the OFF position. Defrosting may take a few hours. To speed up defrost time, keep the door open and place a bowl of warm water in the refrigerator.

During the defrost cycle, water will accumulate in the drip tray. The drip tray may also need to be emptied during the defrost process. Do not leave unattended.

After defrosting, empty and wipe down the drip tray, as well as the interior of the refrigerator. You may now reset your refrigerator to the desired temperature and return food.

General Features

REFRIGERATOR FEATURES & USE

1. Remove the top hinge cover by using a flathead screwdriver. Place the head under the front edge of the cap and gently lift.

2. Loosen the top hinge screws using a Phillips head screw driver.

3. Adjust the door or put a spacer in between and tighten the screws.

4. Replace the top hinge cover by aligning the rear of the cover with the rear of the hinge. Press firmly on the front of the cover until it snaps in place.

Door Alignment (see fig. # 1)

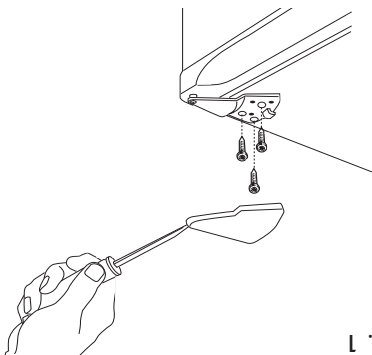


fig. 1

LIMITED WARRANTY

What is covered and for how long?

This warranty covers all defects in workmanship or materials for a period of:

12 months labor (carry-in service)

12 months parts

5 years sealed system

The warranty commences on the date the item was purchased and the original purchase receipt must be presented to the authorized service center before warranty repairs are rendered.

EXCEPTIONS: Commercial or Rental Use warranty

90 days labor (carry-in only)

90 days parts

No other warranty applies

What is covered.

1. The mechanical and electrical parts, which serve as a functional, purpose of this appliance for a period of 12 months. This includes all parts except finish, and trim.

2. The components of the sealed system e.g. hermetic compressor, condenser and evaporator from manufacturing defects for a period of 5 years from the date of purchase. Any damages to such components caused by mechanical abuse or improper handling or shipping will not be covered.

What will be done?

1. We will repair or replace, at our discretion any mechanical or electrical part which proves to be defective in normal usage during the warranty period so specified.

2. There will be no charge to the purchaser for parts and labor on any covered items during the initial 12 month period. Beyond this period only parts are covered in the remaining warranty. Labor is not provided and must be paid by the customer.

IMPORTANT

Do Not Return This Product To The Store

If you have a problem with this product, please contact the "Haier Customer Satisfaction Center" at 1-877-337-3639.

DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE



Made in China
Haier America • New York, NY 10018
Printed in China

RF-9999-165
Issued: March-04

- The thermostat control will click when it cycles on and off.

- Boiling water, gurgling sounds or slight vibrations that are the result of the refrigerator circulating through the cooling coils.

Normal Operating Sounds You May Hear

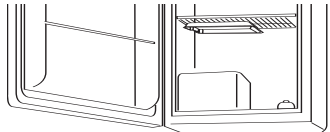


fig. 3

1. Gently tilt the shelf up and slide forward until the shelf has been completely removed.

To remove or replace a full-width slide-out shelf: (see fig. # 2)

Adjustable temperature dial:

Your refrigerator will automatically maintain the temperature level you select. The temperature control dial has 7 settings plus off. 1 is the warmest, 7 is the coldest. Turning the dial to OFF stops cooling in both the refrigeration and freezer sections. At first, set the dial to 4 and allow 24 hours to pass before adjusting the temperature to your needs.

To defrost freezer, remove food and ice cube tray from the freezer section. Your model requires you to place the drip tray under the freezer section (see Fig. 3). To defrost turn the temperature control dial to the OFF position. Defrosting may take a few hours. To speed up defrost time, keep the door open and place a bowl of warm water in the refrigerator.

During the defrost cycle, water will accumulate in the drip tray. The drip tray may also need to be emptied during the defrost process. Do not leave unattended.

After defrosting, empty and wipe down the drip tray, as well as the interior of the refrigerator. You may now reset your refrigerator to the desired temperature and return food.

For maximum energy efficiency, defrost freezer section whenever frost accumulates to a thickness of 1/4" or more on freezer walls. Note that frost tends to accumulate more during the summer months.

To defrost freezer, remove food and ice cube tray from the freezer section. Your model requires you to place the drip tray under the freezer section (see Fig. 3). To defrost turn the temperature control dial to the OFF position. Defrosting may take a few hours. To speed up defrost time, keep the door open and place a bowl of warm water in the refrigerator.

During the defrost cycle, water will accumulate in the drip tray. The drip tray may also need to be emptied during the defrost process. Do not leave unattended.

After defrosting, empty and wipe down the drip tray, as well as the interior of the refrigerator. You may now reset your refrigerator to the desired temperature and return food.

Defrosting Your Refrigerator (see fig. # 3)

- This may be normal to maintain constant temperature during high temperature and humid days.

Refrigerator runs too frequently

- Check for blockages e.g. food containers, crisp cover, shelves, bins etc.

- Re-align refrigerator door.

Refrigerator door does not shut properly:

- Foods improperly wrapped or sealed are giving off odors.

- Interior needs cleaning.

Refrigerator has an odor:

- Check door gaskets for proper seal.

- This is normal during high humidity periods.

Moisture build up on interior or exterior of the refrigerator:

- Check to see if doors are completely closed.

- Doors may have been opened frequently or for an extended period of time.

Refrigerator Does Not Operate

Check if thermostat control is not in the "OFF" position.

Check if refrigerator is plugged in.

Check if there is power at the ac outlet, by checking the circuit breaker.

Food temperature appears too warm

Allow time for recently added warm food to reach fresh food temperature.

Frequent door openings.

Adjust temperature control to colder setting.

Check gaskets for proper seal.

or freezer temperature.

Check door gaskets for proper seal.

Prolonged or frequent door openings.

This is normal during high humidity periods.

TROUBLESHOOTING

Clean door gaskets every three months according to

Door Gaskets:

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the refrigerator vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

Clean door gaskets every three months according to

Door Gaskets:

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the refrigerator vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

Clean door gaskets every three months according to

Door Gaskets:

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the refrigerator vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

Clean door gaskets every three months according to

Door Gaskets:

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the refrigerator vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

Clean door gaskets every three months according to

Door Gaskets:

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the refrigerator vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

PROPER REFRIGERATOR CARE & CLEANING

Cleaning and Maintenance

Warning:

- To avoid electric shock always unplug your refrigerator before cleaning. Ignoring this warning may result in death or injury.

Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft cloth, dampened with the cleaning solution, to wipe down your refrigerator.

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the refrigerator vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

Clean door gaskets every three months according to

Door Gaskets:

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the refrigerator vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

Clean door gaskets every three months according to

Door Gaskets:

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the refrigerator vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

Clean door gaskets every three months according to

Door Gaskets:

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the refrigerator vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

Clean door gaskets every three months according to

Door Gaskets:

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the refrigerator vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

Clean door gaskets every three months according to

Door Gaskets:

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the refrigerator vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

Clean door gaskets every three months according to

Door Gaskets:

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so air can circulate inside. When moving always move the refrigerator vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

Clean door gaskets every three months according to

Door Gaskets:

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

Rinse with clean warm water and dry with a soft cloth.

For long vacations or absences, empty food from refrigerator and defreezer, move the temperature DIAL to the OFF position and clean the refrigerator and door